

# **RE-314BI**

### **FAULT ISOLATOR BASE**

#### General

The Isolator Base is an automatic switch that isolates a part of the loop with bidirectional protection. The Isolator base should be spaced between groups of sensors or modules in a loop to protect the rest of the loop. If a short occurs between any two isolators, then both isolators immediately switch to an open state and isolate the devices between them. The remaining units on the loop continue to fully operate. LED indicator available on the circumference to the status of the base without opening the detector



#### **Features**

- Low Standby Current.
- Easy to install
- Standard base dimension.
- Bidirectional protection.
- Low standby current.

## **Specification**

Electrical Specification	
Min Supply Voltage (Vmin)	17V
Max Supply Voltage(Vmax)	28VDC, 37VPeak
Nominal Supply Voltage(V <sub>nom</sub> )	24VDC
Quiescent Current at 24V(Ic)	30μΑ
Leakage Current at 24V(I <sub>L</sub> )	2 mA when isolating
Max Curent (through loop)(I <sub>s</sub> )	1A continuous, 3A Peak
Isolating Voltage (V∞)	<14V
Maximum on resistance(Z₅)	0.02Ω
Re-connect Voltage(Voc)	14 ~ 16V
Dimensions	99 mm ø X 11mm H

RE-314BI / Rev 03-EN / 2020-2021

## **Terminal Diagram**

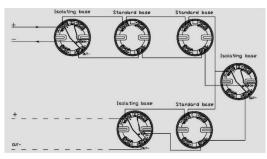


Figure 1 - Class A Wiring

Note: An Isolator Base can afford maximum of 32 detectors.

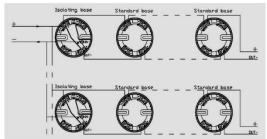


Figure 2 - Class B Wiring

## **Compatability Devices**

Model	Description
RE-317 Series	Detectors

## **Ordering Information**

Model	Description
RE-314BI	Fault Isolator Base

150A, Electronics Industrial Estate,
Perungudi,Chennai – 96, India.
E-mail: <a href="marketing@ravelfire.com">marketing@ravelfire.com</a>; Web: www.ravelfire.com

#### RAVEL ELECTRONICS LTD.,

Unit 11, Chancel Industrial Estate, Newhall street, Willenhall WV13 1NX, West Midlands, United Kingdom. E-mail: <a href="mailto:info@ravelfire.co.uk">info@ravelfire.co.uk</a>; Web: www.ravelfire.co.uk

#### USA

RAVEL AMERICAS INC., 2855 NW 112<sup>th</sup> Ave ST#2 Miami, Doral, Florida 33172, USA.